




## Technical Tip

Date	30 Jan 2012
File Name	TT-HD Camera-Network-002_RTSP Setting
Subject	RTSP Setting and Connection
Model	IP Product
Remarks	

From Firmware v1.1.8 or later version, user can connect IP Products by using RTSP.

### 1) Setting of RTSP in Web Configuration

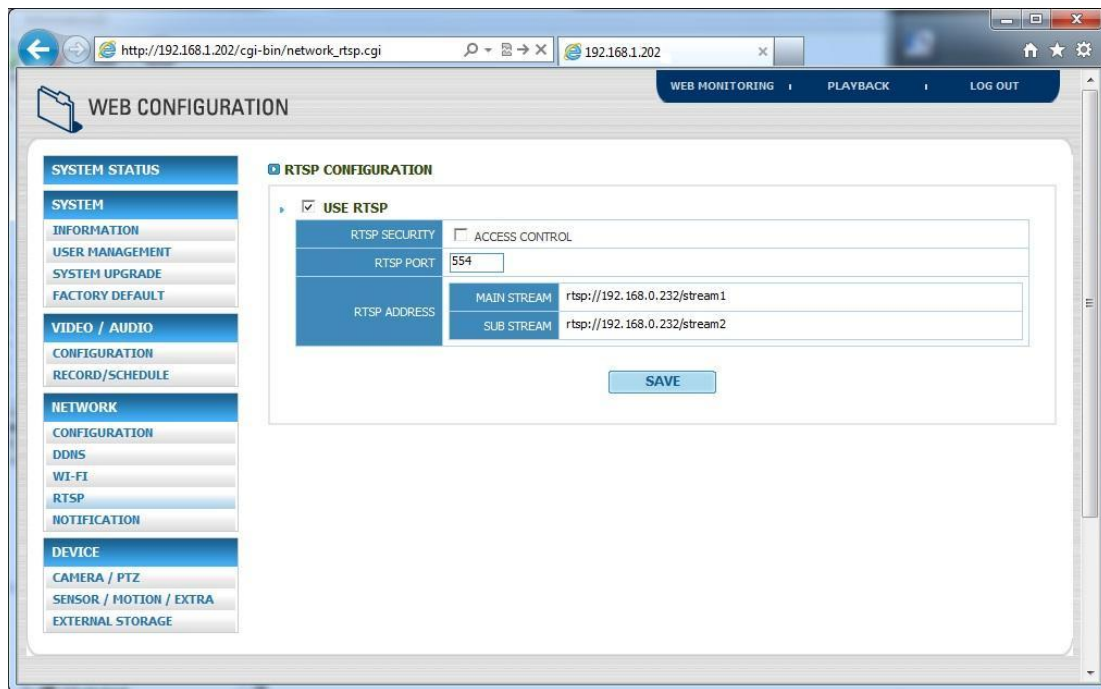

1.1 In RTSP tab, enable [USE RTSP]

1.2 Input RTSP Port (e.g. 554)

1.3 Click [SAVE]


Note: If [Access Control] is enabled, then user needs to input user ID and password (e.g. admin & 1234) when she uses RTSP player to make connection.




## 2) Connect by Using RTSP Player

2.1 Run RTSP Player in your PC  
(e.g. [VLC media player](#))

2.2 Go to Media menu > select Open Network Stream

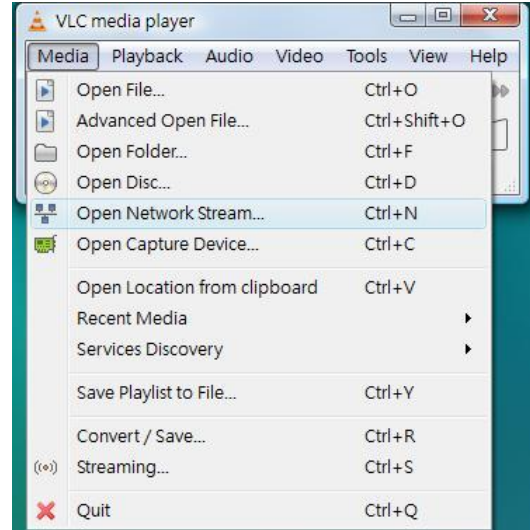

2.3 Enter network URL of the IP product.  
(e.g. [rtsp://192.168.1.202/stream1](#))

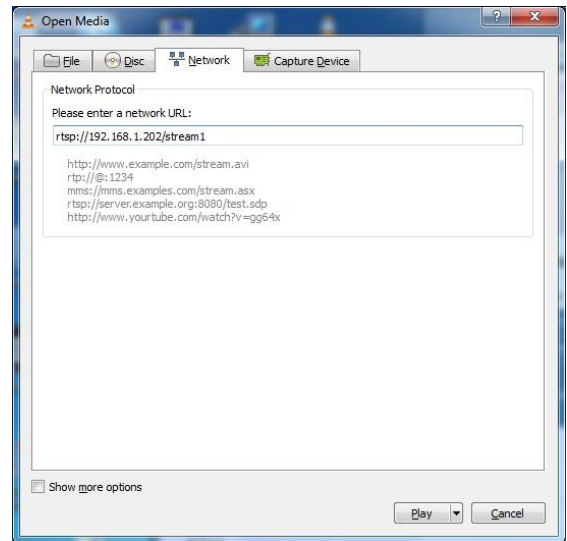

>>>> End <<<<<